


# Controls & Features

---

To activate the speed limiter over-ride mode:

Push the start/over ride button (3) when the front differential lock mode is activated.

## LEFT HANDLEBAR

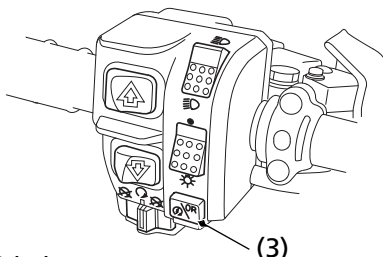


(3) start/over ride button

Front final gear system failure:

The differential lock indicator and 4WD indicator (4) will both flash when there is any abnormality in the front final gear system. If this occurs, the front final gear actuator will stop moving, and the front final gear system will be fixed in the current position, either 2WD mode, 4WD mode or front differential lock mode.

If both the differential lock indicator and 4WD indicator flash, reduce speed and take your ATV to your dealer as soon as possible.

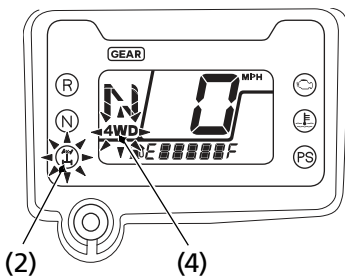

(2) differential lock indicator

(4) 4WD indicator