

# Controls & Features

---

Be sure the engine is on and the headlights are turned off before using the accessory socket, otherwise you may drain the battery.

The accessory socket's rated capacity is DC 12 V, 120 Watts (10 A) or less. If you exceed this limit, you may blow a fuse. See *If a Fuse Blows*, [page 221](#).

When you are done using an accessory, unplug it, and cover the socket with the cap.

Be careful not to flood this accessory socket when washing your ATV.