


Air Cleaner

Cleaning

1. Remove the seat ([page 120](#)).

UNDER SEAT

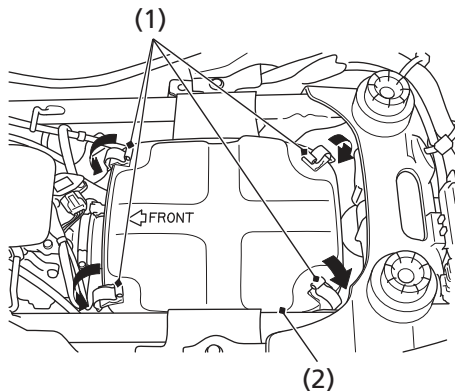

(1) retainer clips

(2) air cleaner housing cover

2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).