

Maintenance Schedule

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST | INITIAL | REGULAR | | Refer to page | |
|-------|--------------------------------|--------------------------|---------|--------------------|------|------------------|------|
| | | | MAINT. | MAINT. INTERVAL | | | |
| | | | mi | 100 | 600 | | 1200 |
| | | | km | 150 | 1000 | | 2000 |
| | | MONTH | 1 | 6 | 12 | | |
| NOTE | HOURS | 20 | 100 | 200 | | | |
| | DRIVETRAIN BOOTS | | | | | 182 | |
| | FRONT/REAR FINAL GEAR OIL | | | (R: EVERY 2 YEARS) | | 136, 138 | |
| * | BRAKE FLUID | NOTE 3 | | | | 166 | |
| * | BRAKE PADS WEAR | NOTE 1, 2 | | | | 169 | |
| * | BRAKE LIGHT SWITCH | | | | | 173 | |
| | BRAKE SYSTEM | | | | | 166 | |
| * | REVERSE INHIBITOR SYSTEM | | | | | 157 | |
| | GUARDS | | | | | 181 | |
| * | CLUTCH SYSTEM | | | | | 156 | |
| * | SUSPENSION | | | | | 163 | |
| * | SPARK ARRESTER | | | C | C | 162 | |
| * | NUTS, BOLTS, FASTENERS | | | | | — | |
| ** | WHEELS/TIRES | | | | | 174 | |
| ** | TIE-ROD AND JOINT BOOTS | | | | | — | |
| ** | STEERING SHAFT HOLDER BEARINGS | | | | | — | |
| ** | STEERING SYSTEM | | | | | — | |

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 242](#)).

** In the interest of safety, we recommend these items be serviced only by your dealer.