

# Coolant

---

## Radiator Core

Refer to *Safety Precautions* on [page 109](#).

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your dealer if the air flow is restricted over more than 20% of the radiator surface.

Clean the radiator core after riding the ATV in mud.

### **TRX500FM5:**

The right, left and center radiator grill covers must be removed to clean the radiator core.

### **TRX500FM6/FM7:**

The left and center radiator grill covers must be removed to clean the radiator core.