
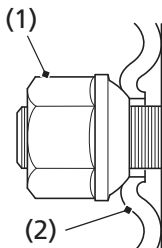


If You Have a Flat Tire

Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on [page 109](#).



TRX500FM5/FM6
(Steel wheel model):

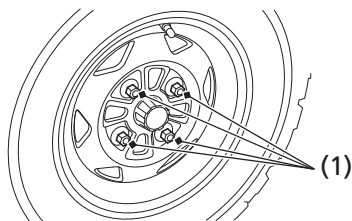

Wheel nuts:
47 lbf·ft (64 N·m, 6.5 kgf·m)

(1) wheel nuts

TRX500FM7
(Aluminum wheel model):

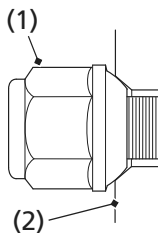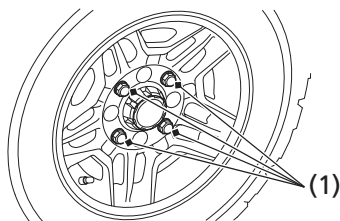

Wheel nuts:
62 lbf·ft (84 N·m, 8.6 kgf·m)

(2) wheel rim

Removal

1. Park your ATV on a firm, level surface.
2. Loosen — but do not remove — the wheel nuts (1).
3. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
4. Remove the wheel nuts.

(cont'd)