

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER	INITIAL	REGULAR		Refer to page
		COMES	MAINT.	MAINT. INTERVAL		
		FIRST	mi	600	1200	
		⇨	km	1000	2000	
	MONTH	1	6	12		
	NOTE	HOURS	20	100	200	
*	FUEL LINE				I	—
*	THROTTLE OPERATION				I	129
*	CARBURETOR CHOKE				I	131
	AIR CLEANER	NOTE 1		C	C	123
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2		I	I	128
	SPARK PLUG			I	I	135
*	VALVE CLEARANCE		I	I	I	138
	ENGINE OIL		INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			110
	ENGINE OIL FILTER		REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			115
*	ENGINE IDLE SPEED		I	I	I	134

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 218).