

Maintenance Schedule

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ⇨ | INITIAL MAINT. | | REGULAR MAINT. INTERVAL | | Refer to page |
|-------|---|----------------------------------|-------------------|-----|----------------------------|------|------------------|
| | | | mi | 100 | 600 | 1200 | |
| | | | km | 150 | 1000 | 2000 | |
| | | | MONTH | 1 | 6 | 12 | |
| NOTE | HOURS | 20 | 100 | 200 | | | |
| | DRIVETRAIN BOOTS | | | | | | 161 |
| | REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL | | | | (R:EVERY 2 YEARS) | | 119, 121 |
| * | BRAKE FLUID | NOTE 3 | | | | | 141 |
| * | BRAKE SHOES WEAR | NOTE 1 | | | | | 150 |
| * | BRAKE PADS WEAR | NOTE 1, 2 | | | | | 144 |
| * | BRAKELIGHT SWITCH | | | | | | 151 |
| | BRAKE SYSTEM | | | | | | 141 |
| * | REVERSE LOCK SYSTEM | | | | | | 133 |
| | GUARDS | | | | | | 160 |
| * | CLUTCH SYSTEM | | | | | | 132 |
| * | SUSPENSION | | | | | | — |
| * | SPARK ARRESTER | | | | C | C | 139 |
| * | NUTS, BOLTS, FASTENERS | | | | | | — |
| ** | WHEELS/TIRES | | | | | | 153 |
| ** | TIE-ROD AND JOINT BOOTS | | | | | | — |
| ** | STEERING SHAFT HOLDER BEARINGS | | | | | | — |
| ** | STEERING SYSTEM | | | | | | — |

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 218).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.