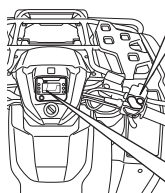

 






Controls & Features

To select the front differential lock mode:

When the 4WD mode is engaged, reduce the speed of your ATV to below 10 mph (16 km/h) and slide the differential lock switch (1) over the 4WD switch. The differential lock indicator (2) will flash fast and the front differential locking process begins. When the locking is complete, the differential lock indicator stays on.



| 4WD mode | front differential lock mode | |
|--|--|--|
|  |  | |
|  (2) off | (in the locking process) fast flashing  (2) | (completed locking)  (2) |
| | (speed above 10 mph (16 km/h). Locking process interrupted) slow flashing  (2) | solid light |
| <u>4WD/</u> | <u>4WD/</u> | <u>4WD/</u> |

(1) differential lock switch (2) differential lock indicator

If the speed of your ATV is above 10 mph (16 km/h), the locking process will be interrupted and the differential lock indicator will slowly flash.

If the differential lock indicator does not stay on when the front differential lock mode is selected, steer the handlebar either to the left or right all the way while your ATV is stopped. If the differential lock indicator is still flashing, move your ATV slowly while steering the handlebar all the way to right or left.