


If the Transmission Is Not Functioning Properly

6. Locate the emergency valve access hole (4) inside the left front fender. Using a screwdriver, turn the emergency valve (5) all the way in. With the engine running, slowly open the throttle to move the ATV forward.
7. See your dealer as soon as possible.

LEFT FRONT

LEFT SIDE

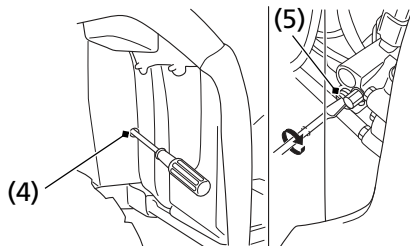

(4) emergency valve access hole (5) emergency valve

When the battery is low (or dead):

- See *If the Battery Is Low (or Dead)*, page 239.