
## **Starting & Stopping the Engine**

## **Preparation**

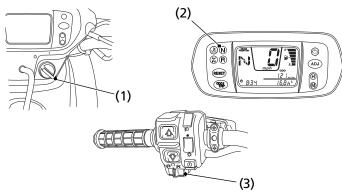

- (1) ignition switch
- (2) neutral indicator
- (3) engine stop switch
- 1. Before starting, select a level surface and lock the parking brake (page 38).
- 2. Turn the ignition switch (1) ON (q).

## Confirm the following:

- The transmission is in neutral, and the neutral indicator (2) is ON.
- The engine stop switch (3) is set to RUN (e ).