

Indicators & Displays

| | | |
|---|--|--|
| 1 | Odometer/tripmeter select button | Selects display of the odometer or tripmeter A or tripmeter B (page 24). This button also used to reset the oil change indicator (page 22). |
| 2 | RESET button | Resets the tripmeter to zero (0) (page 24). This button also used to reset the oil change indicator (page 22). |
| 3 | Reverse indicator | Lights when the transmission is in reverse. <i>Lamp Check</i> . |
| 4 | 4WD indicator | Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your dealer as soon as possible. <i>Lamp Check</i> . |
| 5 | High oil/coolant temperature indicator | Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the high oil/coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 197. <i>Lamp Check</i> . |