

# Spark Plugs

## Spark Plug Recommendation

standard spark plug	CPR6EB-9 (NGK)
---------------------	----------------

Use only the recommended type of spark plug in the recommended heat range.


### NOTICE

Using spark plugs with an improper heat range can cause engine damage.

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 101.

### UNDER SEAT

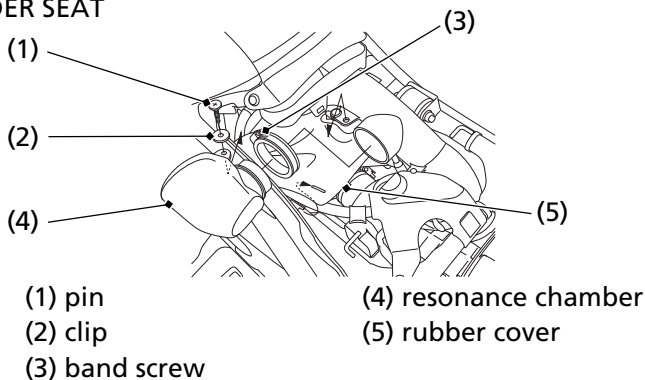

1. Remove the seat (page 112).
2. Remove the pin (1) by a Phillips screwdriver and pull the clip (2) out of the hole.
3. Loosen the band screw (3) and remove the resonance chamber (4).
4. Unhook the rubber cover (5).