

Spark Plug

Spark Plug Recommendation

| | |
|---------------------------------------|-------------------------------------|
| standard spark plug | CR7HSA (NGK) or U22FSR-U (DENSO) |
| for cold climate (below 5°C, 41°F) | CR6HSA (NGK) or U20FSR-U (DENSO) |
| for extended high speed riding | CR8HSA (NGK) or U24FSR-U (DENSO) |

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on [page 84](#).

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap. Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using a spark plug wrench provided in the tool kit, remove the spark plug.

(cont'd)