
Battery

The battery is located in a compartment under the seat.

UNDER SEAT

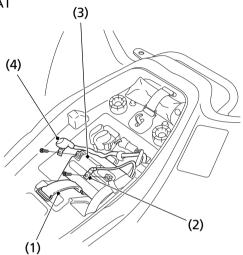

(1) rubber band

- (3) battery
- (2) negative (-) terminal lead (4) positive (+) terminal lead

Removal

- 1. Make sure the ignition switch is OFF (O).
- 2. Remove the seat (page 95).
- 3. Release the rings and remove the rubber band (1).
- 4. Disconnect the negative (–) terminal lead (2) from the battery (3) first, then disconnect the positive (+) terminal lead (4).
- 5. Remove the battery.