

Coolant temperature gauge ()

- Above 252 °F (122 °C):
 - High coolant temperature indicator lights
 - 5th (H) segment flashes
- ▶ Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

Backlight brightness adjustment P.25

Odometer [TOTAL] & Tripmeter [TRIP A/B]

TOTAL/TRIP button switches between the odometer and tripmeters.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset (press and hold **TOTAL/TRIP** button to reset to 0.0 mile/km. At the same time reset the average fuel mileage).