

## Instruments *(Continued)*

### To set the clock:

- 1 Turn the ignition switch to the ON position while pressing and holding **FCD** button. The hour digits start flashing.



- 2 Press **FCD** button until the desired hour is displayed.
  - ▶ Press and hold **FCD** button to advance the hour fast.



- 3 Press **TOTAL/TRIP** button. The minute digits start flashing.



- 4 Press **FCD** button until the desired minute is displayed.
  - ▶ Press and hold **FCD** button to advance the minute fast.



- 5 Press **TOTAL/TRIP** button. The clock is set.
  - ▶ The time can also be set by turning the ignition switch to the OFF position. The display will stop flashing automatically and the adjustment will be canceled if the button is not pressed for about 30 seconds.