 


Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press and hold **TOTAL/TRIP** button when the display in the odometer.
The brightness digits is indicated.
- 2 Press **FCD** button until the desired brightness is displayed.



- 3 Press **TOTAL/TRIP** button. The brightness is set.

▶ The brightness can also be set by turning the ignition switch to the OFF position.

The adjustment will be canceled if the button is not pressed for about 30 seconds.