



Instruments (Continued)

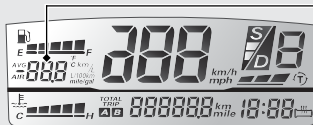

Fuel mileage meter & Air temperature gauge

The current fuel mileage, average fuel mileage, air temperature and no indication can be selected to press **FCD** button.

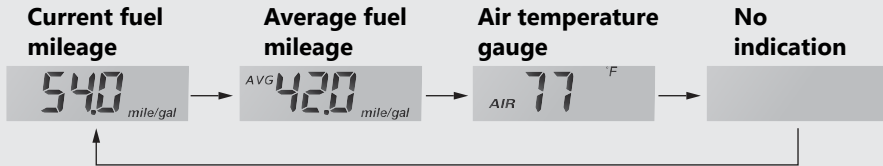

When the 1st (E) segment of the fuel gauge is flashed

Available driving distance is displayed. Then the amount of remaining fuel, current fuel mileage, average fuel mileage, air temperature gauge, no indication and available driving distance can be selected to press **FCD** button.

