



S indicator VFR1200XD/XDA

Comes on when the S mode is selected in the AT MODE. ➡P.51

Gear position indicator

D indicator VFR1200XD/XDA


 

Comes on when the D mode is selected in the AT MODE. ➡P.51

VFR1200X/XA

The gear position is shown in the gear position indicator.

VFR1200XD/XDA

The gear position is shown in the gear position indicator when the D, S mode or MT MODE are selected.

- ▶ “-” appears for a few seconds and then goes off when the engine starts.
- ▶ “-” flashes when the engine stop switch position is changed from  (Run) to  (Off) position with the ignition switch in the ON position.
- ▶ “-” flashes when the ignition switch is turned on with the engine stop switch  (Off) position.

The indicator may flash if:

- ▶ The front wheel leaves the ground.
- ▶ You turn the wheel while the motorcycle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch off, then on again.

If the “-” indicator is blinking in the gear position window while riding: ➡P.112