




Switches

VFR1200X/XA

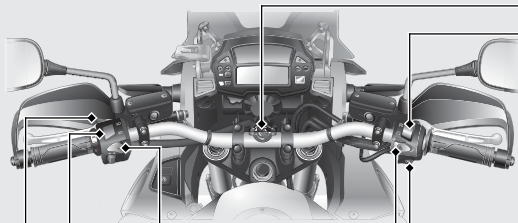

 **Horn button**

Headlight dimmer switch


-  : High beam
-  : Low beam


Passing light control switch

Flashes the high beam headlight.

Engine stop switch

Should normally remain in the

 (Run) position.

- ▶ In an emergency, switch to the  (Off) position (the starter motor will not operate) to stop the engine.

 **Start button**

Headlight turns off when operating the starter motor.

 **Hazard switch**

Switchable when the ignition switch is in the ON position. Can be turned to off regardless of the ignition switch position.

- ▶ The signals continue flashing when the ignition switch is in the OFF or LOCK position after the hazard switch is on.