

Ignition Switch

Switches the electrical system on/off, locks the steering.


- ▶ Key can be removed when in the OFF or LOCK position.


Steering Lock: ➡ P.33

A/M switch

To shift between the AT MODE and MT MODE. ➡ P.52

Engine stop switch

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Off) position (the starter motor will not operate) to stop the engine.

Start button

Headlight turns off when operating the starter motor.

N-D switch

To shift between Neutral and AT MODE. ➡ P.52