
## **Handle Grip Heater** (Continued)

## No indication (Off)

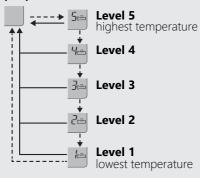

- --→ Press the handle grip heater switch
- Press and hold the handle grip heater switch

Maintains the selected level when the ignition switch is turned to the OFF position.

➤ The heater level is not changed if the ignition switch is turned to the OFF position within 5 seconds after heater level changed.

## If the handle grip heater indicator blinks every 2 seconds: P.113





