


Honda selectable torque control *(Continued)*

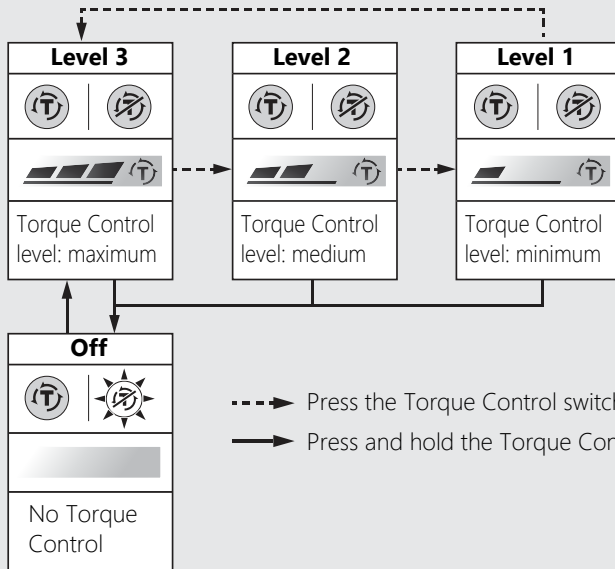

-----> Press the Torque Control switch

————> Press and hold the Torque Control switch