 


Clip

Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.



Installation

1. Push the bottom of the center pin.



2. Insert the clip into the hole.
3. Press down on the center pin to lock the clip.

Right Engine Heat Guard & Right Under Cowl

Removal

1. Remove the clip. ► P. 78
2. Remove the prongs from the grommets.
3. Remove the right engine heat guard.

