

4. Replace the O-ring and apply a thin coat of engine oil to a new O-ring when before installing it.
5. Install the spring and the clutch oil filter cover.
6. Install the clutch oil filter bolts A, B and tighten.
7. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.
▶ P. 84
8. Install a new engine oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m).

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 21 lbf·ft (29 N·m, 3.0 kgf·m).

10. Fill the crankcase with the recommended oil (▶ P. 71, ▶ P. 152) and install the oil fill cap.

Required oil

When changing oil, engine oil filter & clutch oil filter:

4.2 US qt (4.0 L)

11. Check the oil level. ▶ P. 81
12. Check that there are no oil leaks.
13. Install the right engine heat guard and right under cowl.