

Adjusting the Clutch and Brake Levers

You can adjust the distances between the tip of the clutch lever and handle grip, and between the tip of the brake lever and handle grip.

Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position.

After adjustment, check that the levers operate correctly before riding.

NOTICE

Do not turn the adjuster beyond its natural limit.

VFR1200XD/XDA is not equipped with clutch lever and clutch lever adjuster.

