

Adjusting the Windscreen Height

You can adjust the windscreen height 1 of 5 positions.

Windscreen height indicator shows the windscreen height.

The standard position is 5.

► Do not adjust the windscreen while riding.

1. Pull the windscreen adjustment lever to unlock the windscreen.
2. Continue to pull the adjustment lever up, move the adjustment lever forward or backward to raise or lower the windscreen.

