


4. Move the muffler outward.
5. Remove the rear wheel nuts, and remove the rear wheel.

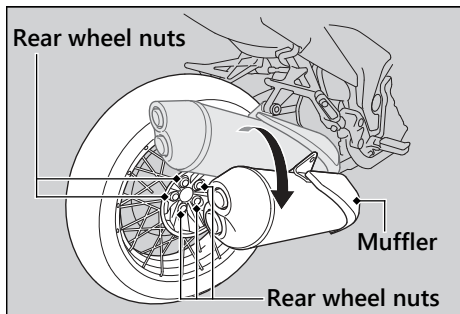

Installation

1. To install the rear wheel, reverse the removal procedure.

2. Install the rear wheel and tighten the rear wheel nuts equally.

Torque: 80 lbf-ft (108 N·m, 11.0 kgf·m)

3. Tighten the muffler band bolt.

Torque: 13 lbf-ft (17 N·m, 1.7 kgf·m)

4. After installing the wheel, apply the brake pedal several times, then recheck the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.