



Position Light Bulb

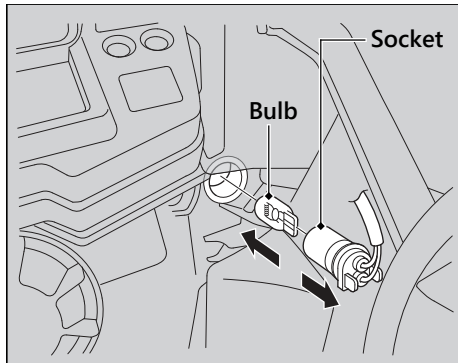

1. Pull the socket and remove it.
2. Pull out the bulb without turning.
3. Install a new bulb and parts in the reverse order of removal.

Brake light/Taillight

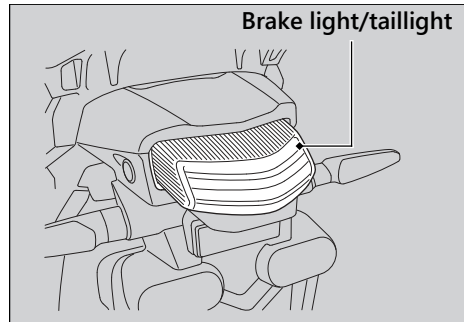

The brake light and taillight uses several LEDs.

If there is a LED which is not turned on, see your dealer for servicing.