

Electrical Trouble ► Blown Fuse

1. Remove the seat. ► P. 80
2. Remove the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the fuse box cover and check for a blown fuse.

If the main fuse A is blown, see your dealer for servicing.

Always replace a blown fuse with a spare fuse of the same rating.

4. Reinstall the fuse box cover.
5. Reinstall the seat.