

Servicing Your Honda

Service Preparations

Maintenance Component Locations	73
Side Cover Removal.....	76
Tool Kit.....	78
Owner's Manual Storage.....	79
Seat Removal.....	80
Clip Removal.....	82

Service Procedures

Fluids & Filters

Fuel	83
Engine Oil & Filter.....	86
Coolant.....	95
Air Cleaner	100
Crankcase Breather	102
Final Drive Oil.....	103

Engine

Throttle	106
Clutch System.....	108
Spark Plugs.....	112

Chassis

Suspension.....	117
Brakes	122
Tires	126
Side Stand.....	136

Electrical

Battery	137
Appearance Care	142