

# Maintenance Schedule

			FREQUENCY		ODOMETER READING (Note 1)								
					× 1,000 mi	0.6	4	8	12	16	20	24	Refer to page
ITEM		NOTE	× 100 km	10	64	128	192	256	320	384			
EMISSIONS-RELATED ITEMS	*	FUEL LINE				I		I		I	—		
	*	THROTTLE OPERATION				I		I		I	—		
		AIR CLEANER	2					R			R	100	
		CRANKCASE BREATHER	3			C	C	C	C	C	C	102	
		SPARK PLUGS				I	R	I	R	I	R	112	
	*	VALVE CLEARANCE				I		I		I		—	
		ENGINE OIL				INITIAL=600 mi (1,000 km) or 1 month: R REGULAR=EVERY 8,000 mi (12,800 km) or 12 months: R						86	
		ENGINE OIL FILTER				R		R		R		R	91
	*	ENGINE IDLE SPEED				I	I	I	I	I	I	—	
		RADIATOR COOLANT	5					I		I		R	95
	*	COOLING SYSTEM						I		I		I	—
	*	SECONDARY AIR SUPPLY SYSTEM						I		I		I	—
*	EVAPORATIVE EMISSION CONTROL SYSTEM	4						I			I	—	

\* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 212).