


# Side Cover Removal

Refer to *Safety Precautions* on page 62 .

The right side cover ( 1 ) must be removed to service the circuit fuses, suspension adjustment or to access the owner's manual.

RIGHT SIDE

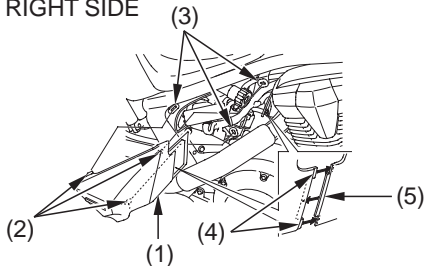

- |                      |                           |
|----------------------|---------------------------|
| (1) right side cover | (4) right side cover tabs |
| (2) prongs           |                           |
| (3) frame grommets   | (5) left side cover tab   |

## Right Side Cover Removal

1. Carefully pull the right side cover out until the prongs ( 2 ) are clear of the frame grommets ( 3 ).
2. Remove the right side cover.

## Right Side Cover Installation

1. Align the right side cover tabs ( 4 ) with the left side cover tab ( 5 ).
2. Position the right side cover so the prongs are aligned with the frame grommets.
3. Push the prongs in.