

## Engine Oil & Filter

---

8. Install the new oil filter and tighten it by hand.
  9. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:  
**19 lbf·ft (26 N·m , 2.7 kgf·m)**
  10. Check the condition of the sealing washers on the drain bolts. Replace the washers every other time the oil is changed.  
Install the drain bolts and tighten them to the specified torque:  
**22 lbf·ft (30 N·m , 3.1 kgf·m)**
  11. Fill the crankcase with the recommended oil (page 87 ), approximately:  
**3.9 US qt (3.7 ℓ)**
  12. Install the oil fill cap/dipstick securely.
  13. Start the engine and let it idle for 3—5 minutes.
  14. Stop the engine and wait 2—3 minutes.
  15. Hold the motorcycle upright and check that the oil level is at the upper level mark on the oil fill cap/dipstick (page 90 ).
  16. Check that there are no oil leaks.
- If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.