


## Oil Recommendation

type	hypoid gear oil
viscosity (weight)	SAE 80

## Checking & Adding Oil

Refer to *Safety Precautions* on page 62 .

LEFT REAR

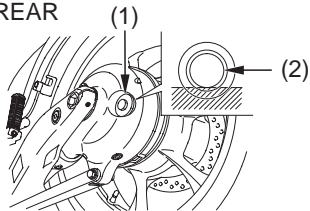

(1) oil fill cap

(2) oil fill inspection hole

1. Place the motorcycle on its side stand on a firm, level surface.
2. Remove the oil fill cap ( 1).
3. Check the oil level. It should be flush with the lower edge of the oil fill inspection hole ( 2).
4. If the level is low, check for leaks. Add the recommended oil through the oil fill inspection hole until it reaches the lower edge of the opening.
5. Install the oil fill cap and tighten to the specified torque:  
9 lbf·ft ( 12 N·m , 1.2 kgf·m)