


## If a Fuse Blows

### *Circuit Fuse Access:*

7. To access the circuit fuses, remove the right side cover (page 77 ).
8. Remove the fuse box cover ( 6 ).

 
### RIGHT SIDE

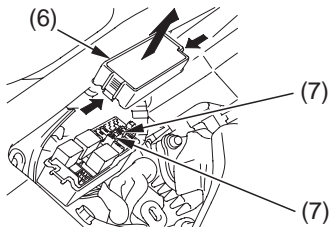

- (6) fuse box cover      (7) spare fuses

9. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown ( 8 ), replace it with a spare fuse ( 7 ) of the same rating.

### CIRCUIT FUSE



- (8) blown fuse

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

10. Install the fuse box cover.
11. Install the right side cover.