

## Maintenance Fundamentals

- Engine coolant level is between the (UPPER) and (LOWER) level marks. ➤ P. 70
- Side stand functions properly. ➤ P. 77