

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 87
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 88
<b>Warning Indicators On or Flashing</b> .....	P. 89
Low Oil Pressure Indicator .....	P. 89
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL) .....	P. 89
ABS (Anti-lock Brake System) Indicator .....	P. 90
<b>Tire Puncture</b> .....	P. 91

<b>Electrical Trouble</b> .....	P. 99
Battery Goes Dead .....	P. 99
Burned-out Light Bulb .....	P. 99
Blown Fuse .....	P. 103