

VT1300CXA only

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel

Removal

1. Park on a firm, level surface.
2. Remove the fixing bolts and remove the left brake caliper assembly from the fork leg.
 - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.

► **VT1300CX**

Do not pull the brake lever while the brake caliper is removed.

VT1300CXA

Do not pull the brake lever or depress the brake pedal while the brake caliper is removed.

3. Remove the front axle bolt.
4. Loosen the right and left axle pinch bolts.

