


6. Install the brake caliper and tighten the fixing bolts.

Torque: 23 lbf·ft (31 N·m, 3.2 kgf·m).

NOTICE

When installing the brake caliper into position on the fork leg, carefully fit the brake disc between the pads to avoid scratching them.

7. After installing the wheel, apply the brake lever several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.
8. Check the clearances between each surface of the brake disc and the brake bracket (not the brake pads) are symmetrical.
 - If the clearances are symmetrical, loosen the right axle pinch bolts and pull the right fork outward or push inward to adjust the clearance.

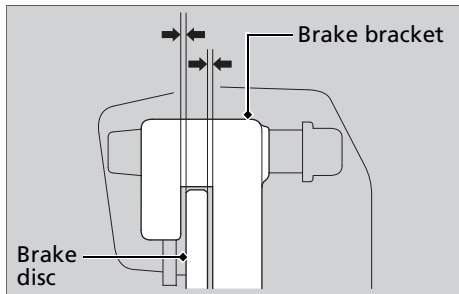

9. Tighten the left axle pinch bolts.

Torque: 16 lbf·ft (22 N·m, 2.2 kgf·m).

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.