










Maintenance Schedule

Items		Frequency	Odometer Reading *1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	84
	Air Cleaner *2						R			R	72
	Crankcase Breather*3			C	C	C	C	C	C	C	85
	Spark Plugs			I	R	I	R	I	R	R	64
	Valve Clearance			I		I		I		I	-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							70	
	Engine Oil Filter			R		R		R		R	70
	Engine Idle Speed			I	I	I	I	I	I	I	-
	Radiator Coolant *4					I		I		R	73
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
Evaporative Emission Control System *5						I			I	-	

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 127).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

C : Clean

R : Replace