


8. Check the clearances between each surface of the brake disc and the brake bracket (not the brake pads) are symmetrical.
- If the clearances are symmetrical, loosen the right axle pinch bolts and pull the right fork outward or push inward to adjust the clearance.

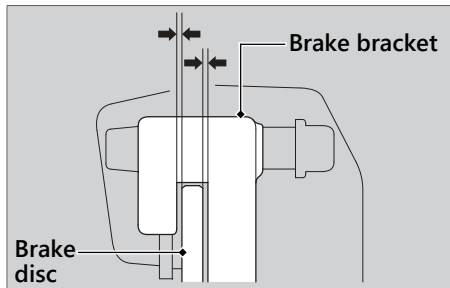

9. Tighten the left axle pinch bolts.

**Torque:** 16 lbf-ft (22 N·m, 2.2 kgf·m)

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.