


## Rear Wheel

### Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. Remove the exhaust pipe joint nuts.

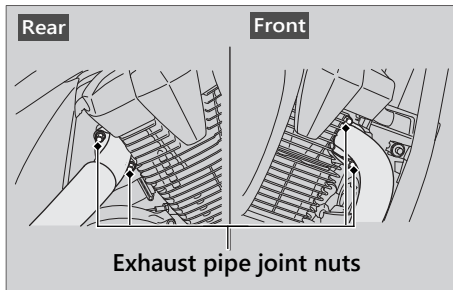

3. Remove the muffler bracket bolt A, bolt B, nuts and washers.
4. Remove the muffler.

