


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

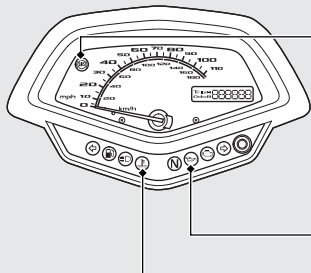

 **High coolant temperature indicator**

If it comes on while riding: ➔ P.91

VT1300CXA

 **ABS (Anti-lock Brake System) indicator**

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ P.93

 **Low oil pressure indicator**

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

If it comes on while engine is running:

➔ P.92