



 **Low fuel indicator**

Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when the indicator comes on: 0.66 US gal (2.5 L)

 **High beam indicator**

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position.

**If it comes on while engine is running:**  **P.92**

 **Right turn signal indicator**

 **Neutral indicator**

Comes on when the transmission is in Neutral.

 **Left turn signal indicator**