
## **Switches**

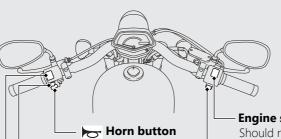



Should normally remain in the (Run) position.

► In an emergency, switch to the 🂢 (Stop) position (the starter motor will not operate) to stop the engine.

## **Headlight dimmer switch**

Pressing the switch turns the turn

• **■** : High beam

signal off.

• **ID**: Low beam

## Start button

Headlight turns off when operating the starter motor.