

Troubleshooting

Engine Will Not Start	P. 90
Overheating (High coolant temperature indicator is on)	P. 91
Warning Indicators On or Flashing	P. 92
Low Oil Pressure Indicator	P. 92
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL).....	P. 92
ABS (Anti-lock Brake System) Indicator	P. 93
Tire Puncture	P. 94
Electrical Trouble	P. 103
Battery Goes Dead.....	P. 103
Burned-out Light Bulb	P. 103
Blown Fuse.....	P. 107