

Tire Puncture ► Removing Wheels

6. Tighten the rear brake bracket bolt.

Torque: 51 lbf·ft (69 N·m, 7.0 kgf·m)

7. Tighten the axle holding bolt.

Torque: 20 lbf·ft (27 N·m, 2.8 kgf·m)

8. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.
Before installing the muffler, replace the exhaust pipe gasket with a new gasket.

9. Install the muffler, muffler bracket bolt A, B, nuts and washers.
Tighten the muffler bracket bolt A, B, nuts and exhaust pipe joint nuts.

Exhaust pipe joint nuts:

Torque: 17 lbf·ft (23 N·m, 2.3 kgf·m)

Muffler bracket bolt A, B and nuts:

Torque: 20 lbf·ft (27 N·m, 2.8 kgf·m)

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.