

Maintenance Schedule

Items		Frequency	Odometer Reading *1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related Items	Fuel Line	🔧				I		I		I	–
	Throttle Operation	🔧				I		I		I	85
	Air Cleaner *2						R			R	73
	Crankcase Breather*3			C	C	C	C	C	C	C	86
	Spark Plugs			I	R	I	R	I	R	R	65
	Valve Clearance	🔧		I		I		I		I	–
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							71	
	Engine Oil Filter			R		R		R		R	71
	Engine Idle Speed	🔧		I	I	I	I	I	I	I	–
	Radiator Coolant *4					I		I		R	74
	Cooling System	🔧				I		I		I	–
	Secondary Air Supply System	🔧				I		I		I	–
Evaporative Emission Control System *5	🔧					I			I	–	

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 127).
- 🔧 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C : Clean
- R : Replace